



INSTRUCTIONS BOOK

GAS FORGE

H2

NS: 2022-310



PRADA NARGESA, S.L

Ctra. de Garrigàs a Sant Miquel s/n · 17476 Palau de Santa Eulàlia (Girona) SPAIN

Tel. +34 972568085 · nargesa@nargesa.com · www.nargesa.com

NARGESA CLIENTS

Prada Nargesa has more than 10.500 customers around the world. Some of our clients, those who offer service to third parties with the Nargesa machinery in their workshops, have been pleased to be part of this network that aims to connect them with possible future clients. In this way, all those people or companies that have a need for any part or tool that can be manufactured by using the Nargesa range of machinery, will be able to find a solution in their area to be able to satisfy their production requirements by hiring their services.



We have more than 10.500 customers in 150 different countries around the world

Discover its location on the interactive map on our website!

DO YOU WANT TO PARTICIPATE?

Send an email to nargesa@nargesa.com, include the following information and we will add you to this list.

We want to encourage all those who haven't participated yet in this great commercial network!

1. Company name
2. CIF/Tax Code
3. City
4. Country
5. Machine or machines

PRADA NARGESA

Prada Nargesa S.L. is a family business founded in 1970 located near Barcelona, Spain, with more than 50 years of experience in the sector of manufacturing of industrial machinery, and more than 10.000m² of facilities. Nargesa is a symbol of quality, reliability, warranty and innovation.

Our whole range of machines and accessories is manufactured entirely in Nargesa. We have a constant stock of 400 machines, and we have more than 16.800 machines sold all over the world.



OUR RANGE OF MACHINERY

Ironworker Machines
Ring Roller Bender and Pipe Bender
Non-mandrel Tube and Pipe Bender
Twisting / Scroll Bending Machines
Horizontal Press Brakes
End Wrought Iron Machines
Gas Forges

Iron Embossing Machines
Hydraulic Shear Machines
Hydraulic Press Brakes
Presses for Locks
Broaching Machines
Power Hammers

CERTIFICATES

Prada Nargesa has several certifications that backup both, the design and manufacturing processes, as well as the journey through exporting our products around the world and the quality of the manufacturing components we use for our machines. These facts turn into real advantages for our customers:



AUTHORIZED EXPORTER

- Faster customs procedures
- Reduction of tariff documentation
- Tariff preferences according to geographical location



INNOVATIVE SME

- Development in innovation, design and manufacturing technologies
- Certification and audit of efficiency in product and service
- Ability to foresee customer needs



R+D+I MANAGEMENT

- Manufacturing based on the R+D+I process
- Technological surveillance system

SUCCESS STORIES

At Prada Nargesa we believe that the testimony of our clients is our best guarantee, and that is why we like to expose some of the success stories that we have witnessed around the world:



Discover its location on the interactive map on our website!

DO YOU WANT TO PARTICIPATE?

Send an email to nargesa@nargesa.com including the following information and we will add you to our website:

Company name
Testimonial name
Post in the Company
Country
Descriptive text
Photography with the machine

ÍNDICE

1. MACHINE INFORMATION	9
1.1. Identification of the machine	9
1.2. Dimensions	9
1.3. Description of the machine	9
1.4. Fuel for the furnace	10
1.5. Identification of elements	11
1.6. Description of elements	12
1.6.1. Openings	12
1.6.2. Burners	12
1.6.3. Thermocouple	13
1.7. General Features	14
2. TRANSPORT AND STORAGE	15
2.1. Transport	15
2.2. Storage conditions	15
3. MAINTENANCE	16
3.1. General maintenance.....	16
3.2. Change of the insulating material of the furnace	17
4. HANDLING BOOK	22
4.1. Gas valve	22
4.2. Pushbuttons	22
4.3. Pressure controller and manometer	22
5. INSTALLATION AND SET UP	23
5.1. Location of th machine.....	23
5.2. Dimensions and work área	23
5.3. Admissible external conditions	23
5.4. Set up	24
5.5. Openings	24
5.6. Adjustment of the material support position	25
5.7. First set up of furnace	26
5.8. Ignition of the furnace	28
5.9. Shutdown of the furnace	28
6. POSSIBLE BREAKDOWNS	29
7. WARNINGS	30
7.1. Hazard wastes	30
7.2. Protection elements for the operator	30


TECHNICAL ANNEX

1. MACHINE INFORMATION

1.1. Identification of the machine

Marca	Nargesa
Type	Furnace
Model	H2

1.2. Dimensions

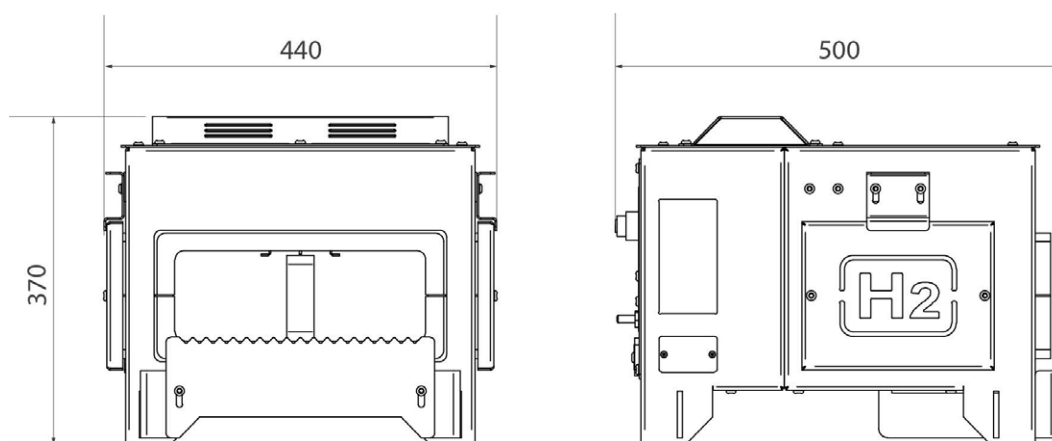

Picture 1. External dimensions of the Furnace H2

1.3. Machine description

The H2 Furnace is an oven designed to heat metal profiles of different thicknesses and shapes. The furnace H2 allows us to heat parts up to a temperature of 1300°C.

The oven is composed of three elements (supplied by Nargesa): the oven, the **Gas hose** and the **Pressure regulator**.

This type of installation will never be modified, in No Case.

The oven is equipped with two **Burners** for propane gas (LPG), independent.

The ignition of the oven is electronic.

The ovens designed and manufactured in Nargesa comply with the regulations in force in Spain, concerning to the Regulation of appliances that use gas as fuel RD919 / 2006.

1.4. Fuel to be used with this foerge

COMPOSITION AND INFORMATION: PROPANE GAS G.L.P.

Chemical nature	Blend of Hydrocarbones
Synonyms	Gas de cocina - Gas licuado de petróleo
Ingredients	Propane Butane Ethane Penthane

IDENTIFICATION OF HAZARDS

Main hazards Physical and chemical hazards	Flammable gas
Specific hazards	Suffocating and flammable gas
Product effects Adverse effects on human health	Suffocating product
Major Synthoms	Inhalation may cause dizziness.


MEASURES TO FIGHT FIRES

Proper fire extinction means	Water mist, chemical dust and carbón dioxide (CO2).
Specific hazards	It could be lit with heat, sparks or flsmess. Steams could travel up to the ignition source and return like flames. Keep out of container tanks.
Special methods	Remove containers from the fire zone, if this could be a riskless fact. Spray with wáter mist the containers exposed to fire. This devide should be remotely controlled, and so after the fire extinction. Fight the fire aains the wind direction, whenever it is posible. Do not extinguish fire before stopping the leak. In case the fire is intense in loaded areas, use hoses with holders to be used remotely. Then if this could not be done, just leave the area and let it burn.
Special Protection to fight against fires.	In closed places, use complete protection against fire and au-to-nomous equipment to protect the respiratory tract.

WARNING!


**Consult your supplier's gas safety data card, before its use.
Strictly follow your supplier's safety protocols.**

1.5. Identification of elements

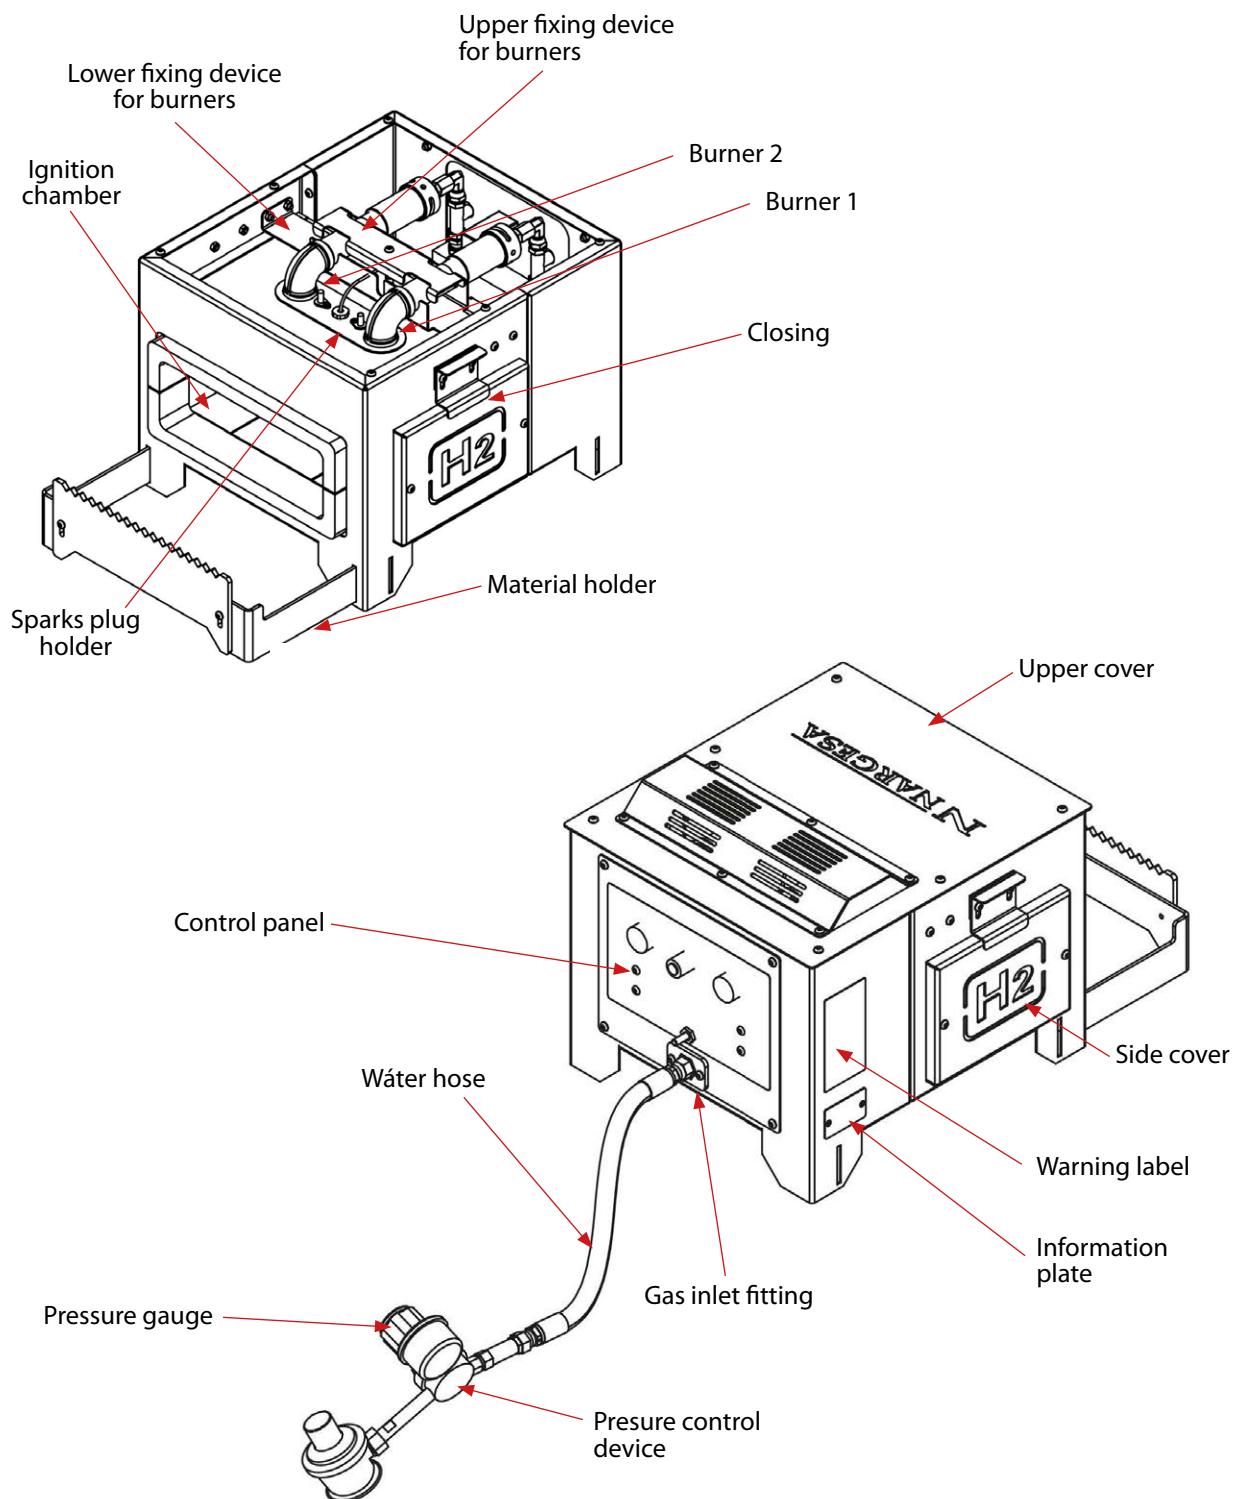

The **Adapter** for the gas bottle is NOT provided along with the furnace because of the major differences according to each country. The Adapter must be equipped with a male thread 21,8 left.

Adapter




1.6. Description of elements

1.6.1. Openings

The furnace has three openings:

- The front opening is the one usually used, since it is the widest.
- Side openings are used to heat longer bars. If we want to heat a larger length of bar we will open only a lateral opening. If we want to heat an intermediate part of the bar we will open the two lateral openings of the oven so that the bar can pass through the inside of the oven and thus be able to heat the desired part

** Entries dimensions: 280x100mm (front) 140x100mm (side)*

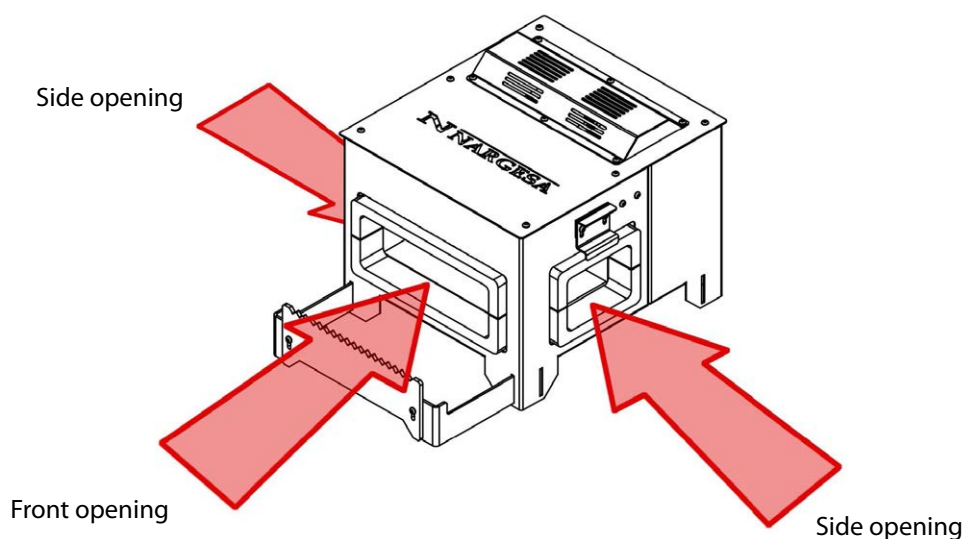


Picture 2. Furnace openings

1.6.2. Burners

The burners of Nargesa's Furnaces has been manufactured by Nargesa and designed exclusively to be used on the furnaces H1, H2 and H3.

- Type of burner: Atmospheric
- Maximum supply pressure: 1,5 Bar
- Fuel: Propane gas GLP
- Power: 4 Kw

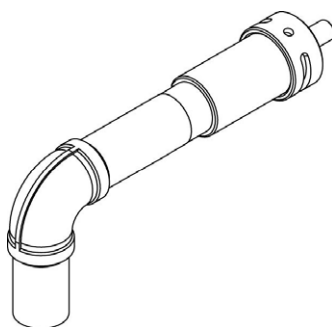

Picture 3. Furnace burner

1.6.3. Thermocouple


The thermocouple is the sensor to measure the temperature. It consists of two different metals, joined at one end. When the union of the two metals is heated or cooled, it produces a voltage proportional to the temperature which causes the safety valve to open or close.

The thermocouple safety valve consists of two parts: The valve and the thermocouple


The valve is equipped with the **Thermocouple pushbutton** for ignition of the furnace.

In the process of ignition of the furnace we press this button to allow the passage of gas. When the thermocouple gets enough temperature, we will release this pushbutton and the gas will continue to pass through the valve. This valve will remain open while the oven is in operation and the thermocouple will keep the working temperature.

Once the oven is switched off, and in a time interval of less than 2 minutes, the thermocouple cools and stops acting on the closing safety valve, thus preventing the passage of gas

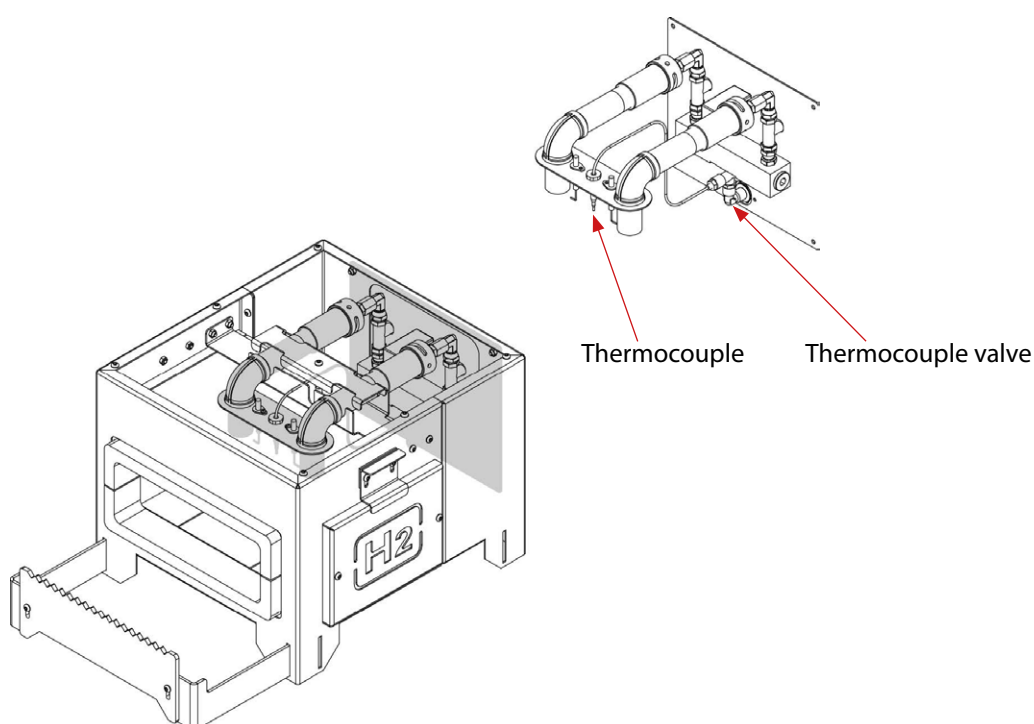

Picture 4. Thermocouple set

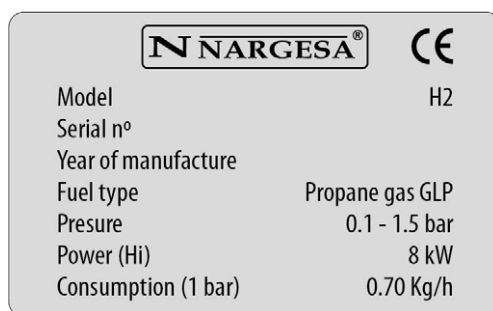

Picture 5. Information plate

1.7. Main features

Dimensions of combustion chamber	324x240x100 mm
Maximum temperature	1300 °C
Nr of burners	2
Type of fuel	Propane gas (GLP)
Adjustable working pressure	0,1-1,5 bar
Power (Hi)	8 kW
Gas intake as 1 per bar	0.7 Kg/h
External dimensions	500x440x370 mm
Weight	40 Kg

2. TRANSPORT AND STORAGE


2.1. Transport

The transport of the furnace must be done by its lower side. Lifting it upwards with both hands.

Do not transport the furnace in any other way since it could be damaged.

WARNING

In order to move the gadget it is necessary that all burners are OFF and wait 24 hours to make sure the isolating material is at room temperature.

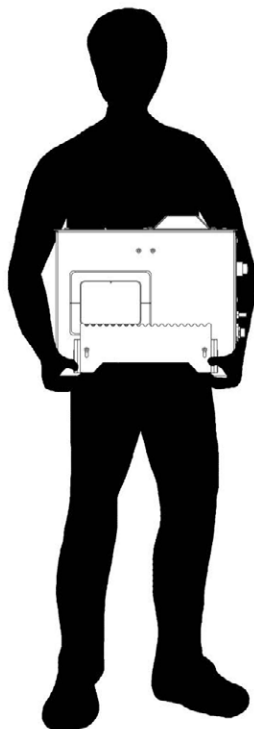

Picture 6. Transport of the machine

2.2. Storage conditions

The furnace cannot be stored in a place that does not meet the following requirements:

- Humidity between 30% and 95%
- Temperature from -25 to 55°C or 75°C for periods not exceeding 24 hours (keep in mind these temperatures are for storage conditions)
- Do not pile machines or any other objects on top of it.
- Do not dismantle for storing


3. MAINTENANCE

3.1. General Maintenance

- It is recommended to keep the **Combustion chamber** clean, as far as possible, to ensure proper operation and thus prolong the useful life of the insulating material.
- It is recommended to check the status of the thermocouple, the ignition device, the gas valve, the regulator and the non-return valve. If any of these elements suffers any type of deterioration, contact the Nargesa technical service.
- It is required the replacement of the thermocouple, the ignition device, the gas valve, the regulator and the non-return valve every 5 years.
- It is recommended to replace the insulating material every 2000 hours of operation.

WARNING:

To proceed with the maintenance of the oven it is necessary to turn off the Burners and wait 60 minutes to ensure that all the components are at ambient temperature.

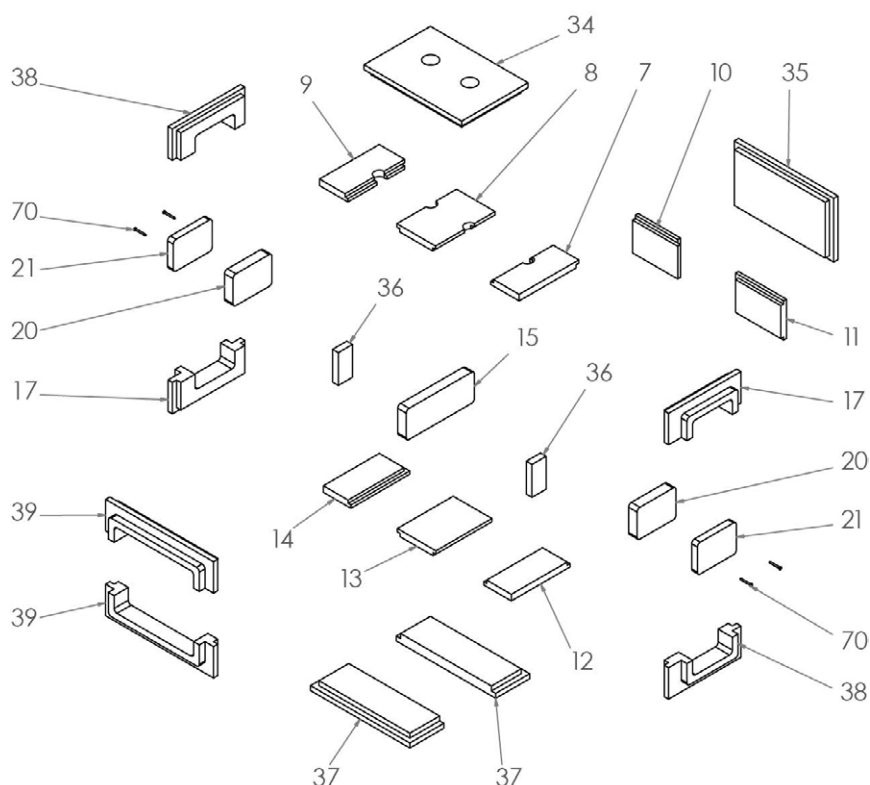

Picture 7: Insulating materials


3.2. Change of the insulating material of the oven

To remove the insulating material from the oven we will follow the following instructions:


WARNING:

To proceed with the change of insulating material it is necessary to turn off the Burners and wait 24 hours to ensure that the insulating material is at room temperature


1. Disconnect the gas bottle from the oven

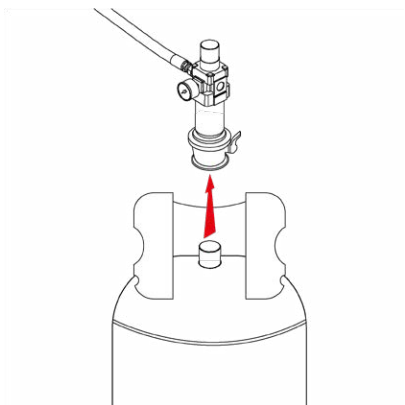


2. Disconnect the **Gas hose** from the **Inlet fitting**

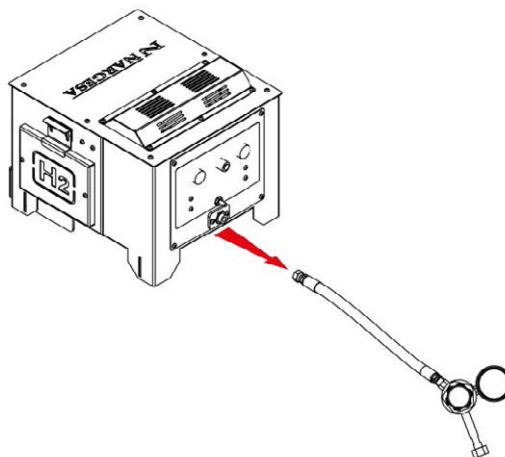


3. Remove the **Upper cover** by unscrewing the six bolts.

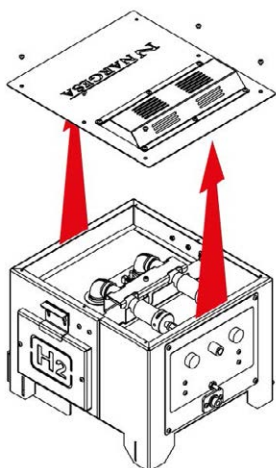


4. Remove the **Upper setting** of the burners

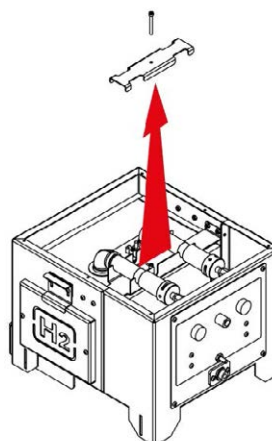


5. Remove the spark plugs by pull away the two bolts

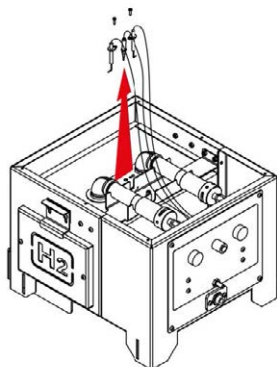


6. Take off the 4 bolts and nuts that hold the **Control Panel**. Remove the **Control panel**, the thermocouple and the spark plugs

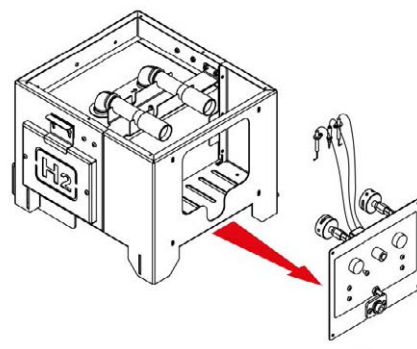


7. Remove the two **Burners** and the **Spark plugs holders**

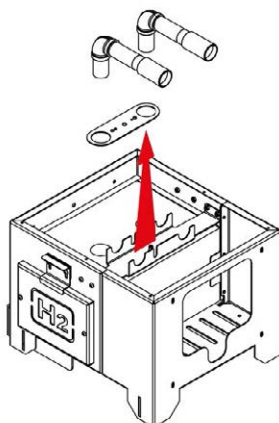


8. Dismantle the **Lower fixing of the burners** by unscrewing the four bolts and the four nuts that hold it.

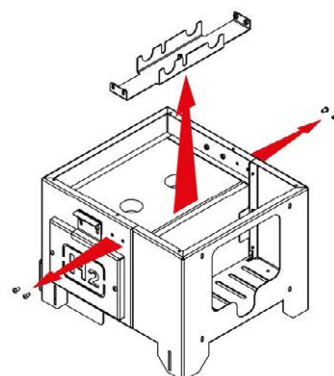


9. Remove the **Side doors** following the instructions on Section 5.5

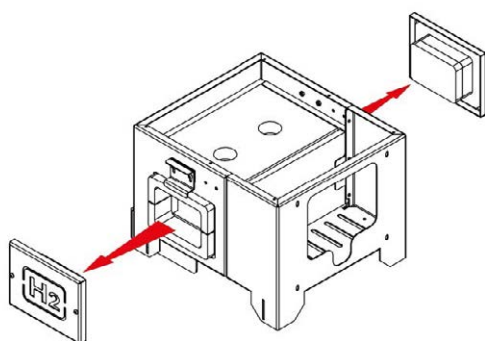


10. Take off the insulation upper plates

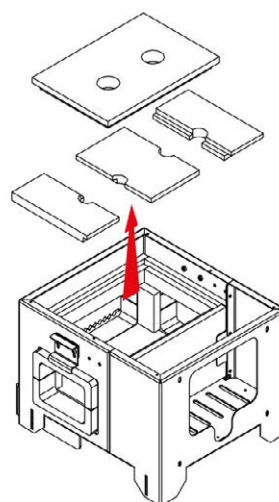


11. Remove the rear insulation panels

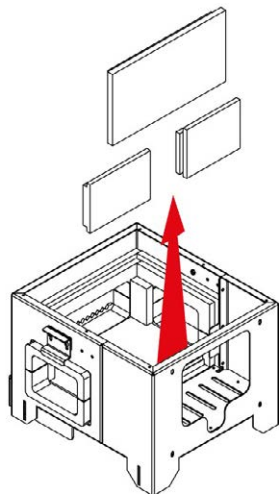


12. Remove the front holders of the upper plate

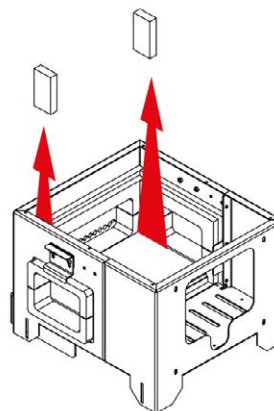


13. Remove the lower insulation

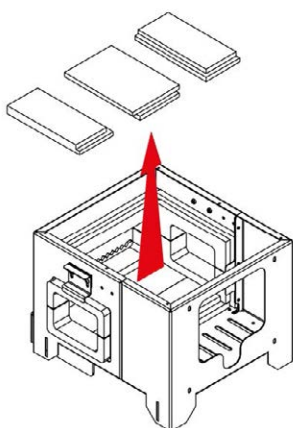


14. Slide the lower insulation towards the back part of the furnace and remove them by the upper side.

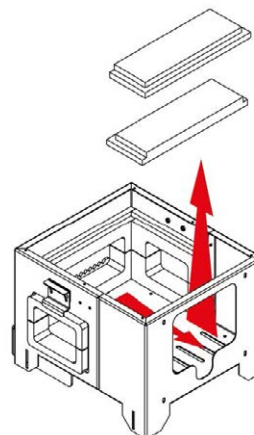

15. Remove the side insulations

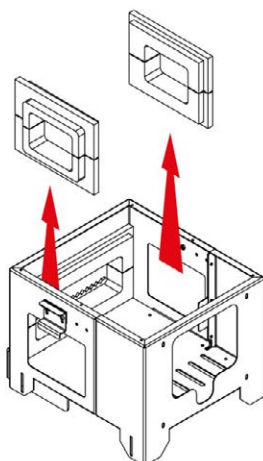


16. Remove the front insulations

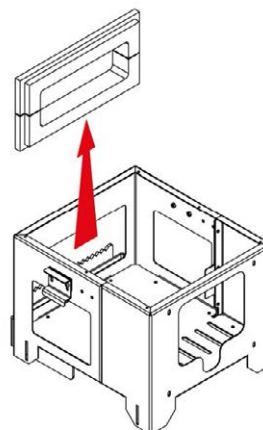


We will use this process in reverse order to do the placement of the insulation:


1. Place the front insulation

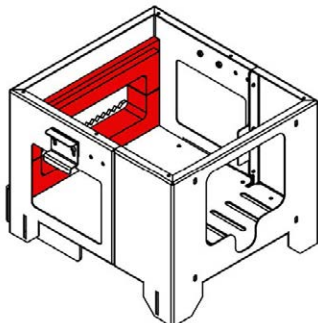


2. Place the side insulation

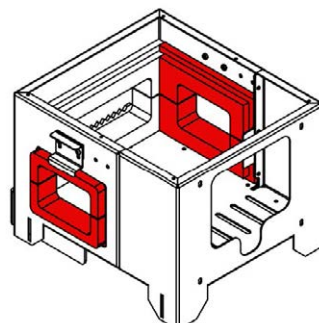


3. Place the lower insulation by the upper/ rear side of the furnace and slide them towards the front part.

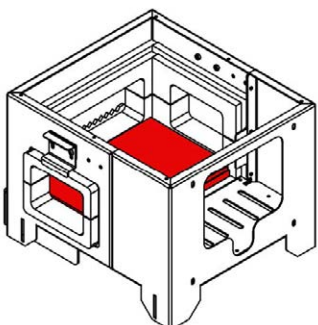


4. Place the front holders of the upper plate

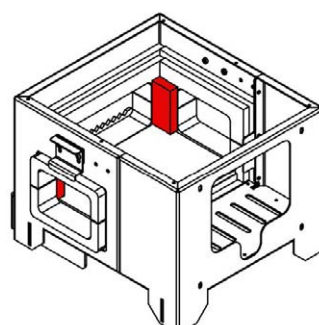


5. Place the rear insulation

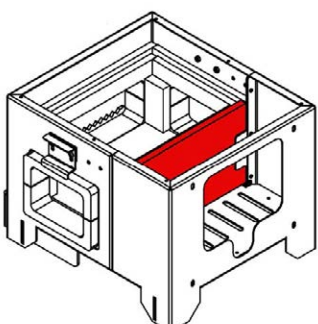


6. Put the insulation upper plates

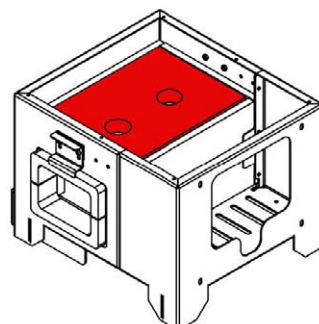


7. Place the **Side doors**. Assemble the **Lower fastener of the burners** by tightening the four screws and the four nuts that hold it

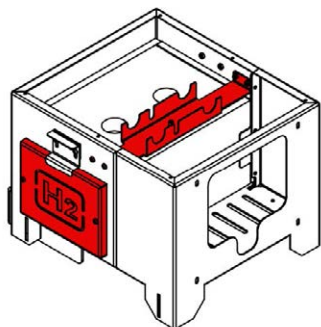


8. Place the **Spark plug holder** and the two **burners** adjusting the **Lower burner fixer** so that the end of the **Burner** is aligned with the lower part of the insulator

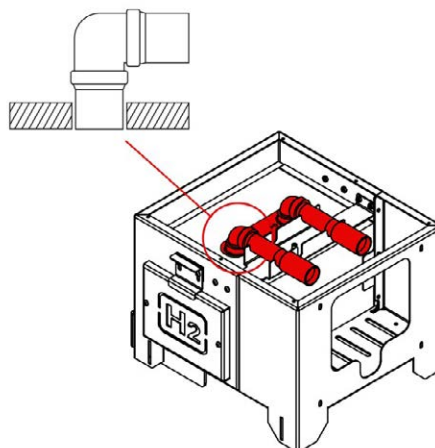


9. Place the **Control panel**, the thermocouple and the spark plugs by fixing the bolts and nuts.

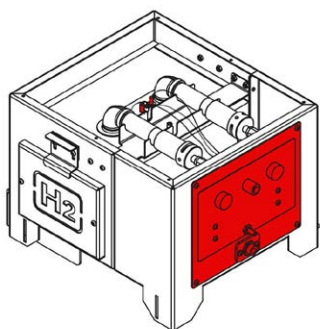


10. Mount the **Upper fixer of the burners**

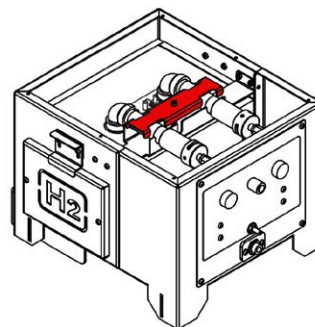

11. Place the **Upper cover** by fixing the 6 bolts

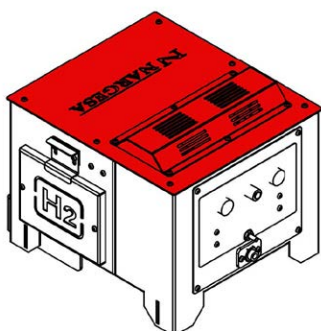


12. Connect the **Gas Hose** to the **Inlet racor**

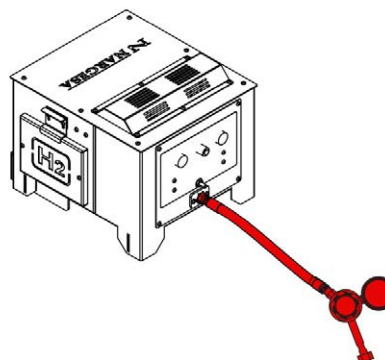

4. HANDLING MANUAL

We have a Control panel which will allow us to control the performance of the furnace H2 and which will enable us to maintain complete control of the machine in a simple and intuitive way.

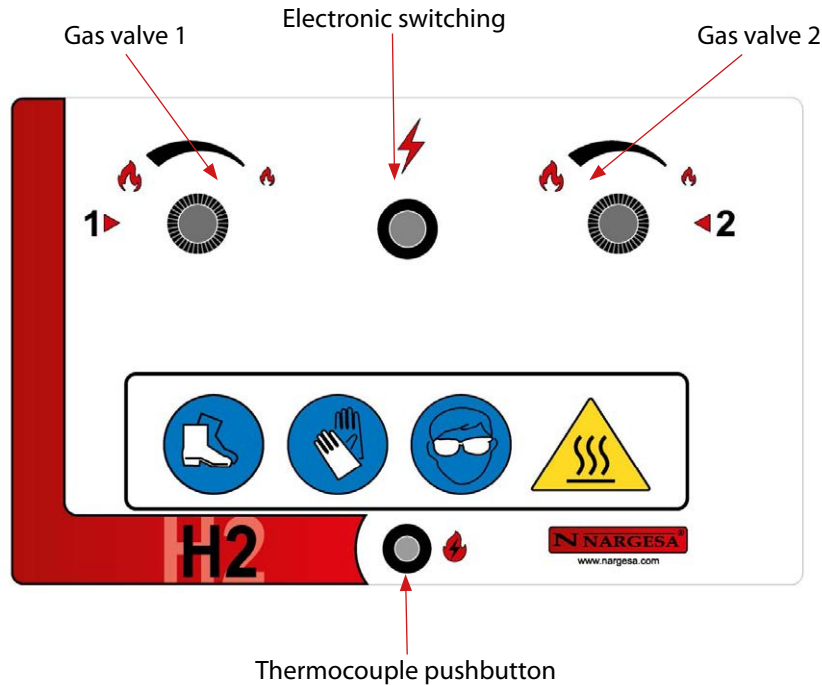

4.1. Gas valve

The **Control panel** has got two valve for the opening of the gas entrance to the **Burners**. These valves are marked with numbers 1 and 2 the operator controls them in order to obtain more on less gas flow.

4.2. Pushbuttons

There are two pushbuttons in the **Control panel**:

- The pushbutton for **Electronic switching** is the one that activates the spark plug and generates the spark to light up the **Burner**.
- The **Thermocouple pushbutton** is the one that opens the valve to get the thermocouple activated. This valve opens the path to the **Gas valves (1 and 2)**

4.3. Pressure regulator and manometer

The **Pressure regulator** allows us to control the working pressure between 0,1 and 1,5 bar, Nargesa suggests to work at a pressure from 0,2 to 1 bar. The **Manometer** will indicate the pressure value on the furnace circuit.

5. INSTALLATION AND SET UP

5.1. Machine location

The aim is to locate the furnace properly to avoid having to move it; otherwise, the user must follow the guidelines described in the transport section (nº2). It should be placed on a smooth and levelled surface to avoid any movement of it during the positioning of the profiles.

5.2. Dimensions y work area


When the furnace is placed, its dimensions, the safety zone, the work area of the operator and the possible lengths of the workpiece will be taken into account.

Safety zone: We will place the furnace in a zone free of elements and objects, following the indications of the following figure.

The oven will be installed in accordance with the regulations in force and will be used only in sufficiently ventilated places.

The oven can be used by a single operator, which must be work frontally or laterally to the machine to be able to handle the piece safely.

Before starting the heating of the pieces, with the **Burners** off, the operator will adjust the **material support**, adapting it to the material profile and its length, as indicated in section 5.6.

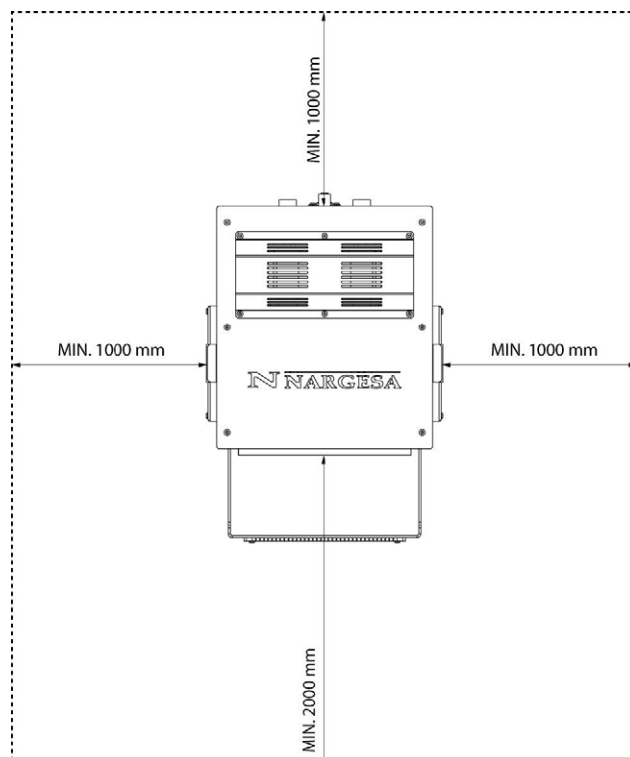

Picture 8. Safety zone

5.3. Admissible outside conditions


- Normal temperature between +5 and +40°C without exceeding an average temperature of +35°C during 24h.
- Relative humidity between 30% and 95% without condensation.

5.4. Setting up


Before putting the furnace into operation:

- Inserting the automatic ignition battery.


1. Unscrew the Automatic ignition button (⚡) located on the control panel.

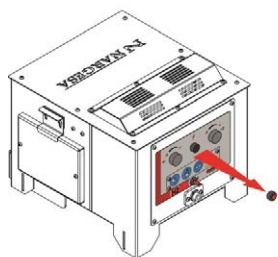

2. Insert the battery into the hole so that its positive end is on the outside.

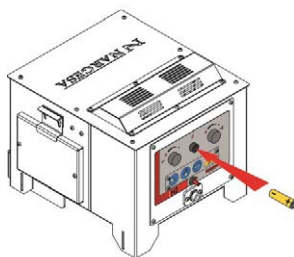

3. Tap tight the Automatic ignition button.

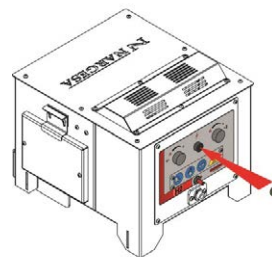

- Connect the **Pressure regulator** to an **Adapter** for the gas cylinder. This adapter is not supplied with the furnace, as this element is different in each country.
- Verify that the maximum gas inlet pressure is less than 25 bars.
- Connect the Adapter to a LPG propane gas cylinder


The Pressure Regulator and Gas Hose supplied by Nargesa will always be used

5.5. Openings

There are two side openings to work with longer materials.

To remove the **Doors**, move the **Lock up** and pull the **Door** out of position. Leave the Closure in its original position.

To place the **Side door**, move the **Latch upwards** and place the **Door** in the lateral opening, press until it stops and lower the **Latch** to its original position.

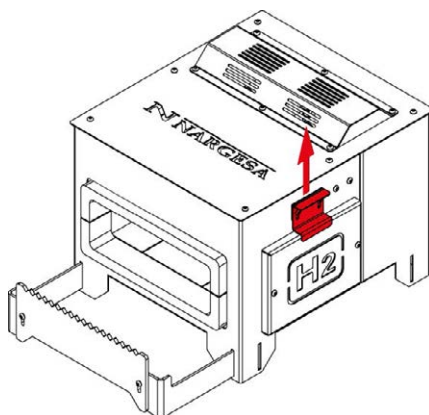

WARNING:


To manipulate the **Side doors** it is necessary to turn off the **Burners** and wait 24 hours to make sure that the insulating material is at room temperature

5.6. Adjustment of the material support position

The oven is equipped with a **Material holder**, this support serves to hold the material while warming up.

The support point of the material can be regulated by moving the support. The point of support must be adjusted according to the length of the material. For material lengths bigger than 800mm, use an external support.

The **Material holder** can be placed in any of the three **Openings**.

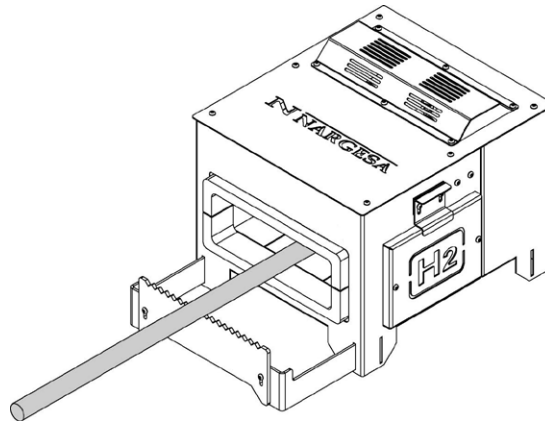

Picture 9. Support of material


5.7. First set up of furnace

For the first start-up of Nargesa gas furnaces, the automatic ignition provided is not used. We will use an external device to light the burner flame. For example a long lighter or a blowtorch.


* **The Adapter (C)** for the gas bottle is not supplied with this furnace, since each country uses different adapters. The Adapter will have to be equipped with a left 21.8 male thread. (L)

To proceed to the propane furnace ignition we will follow the following steps:


1. Check that the **Gas Valves (A)** are completely closed.

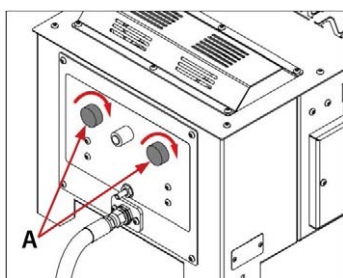


2. Check that the **combustion chamber (B)** is cleared off from any element.

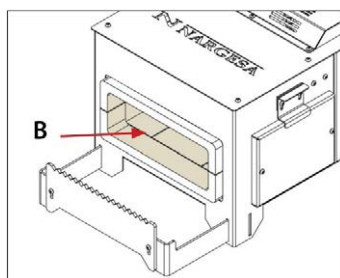


3. Connect the pressure regulator to the ***Adapter (C)**, and this to the gas bottle.

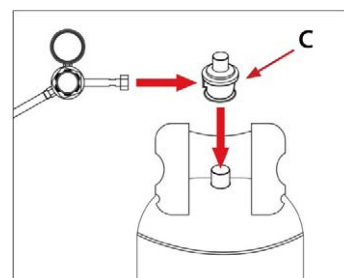


4. Verify that all gas connections between the bottle and the oven are connected correctly and that there are no leaks.

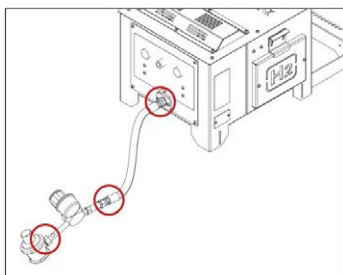


5. Check that the working pressure of the gas is between 0.2 and 0.5 bar.

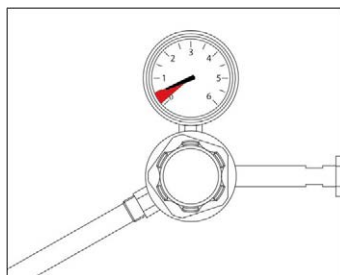


6. Open Gas Valve 1, a few degrees.

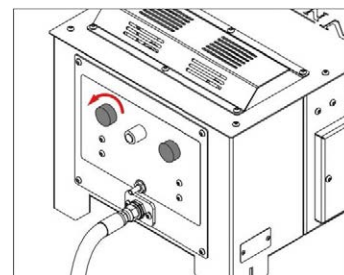


7. Press the **thermocouple button** (🔥)

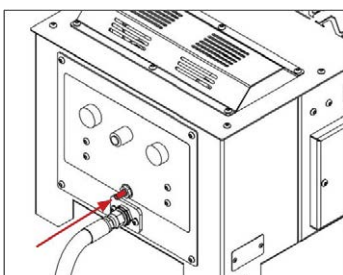


8. Turn on the gas that comes out of the burner. **Important:** never put your hands in the combustion chamber to ignite the gas.

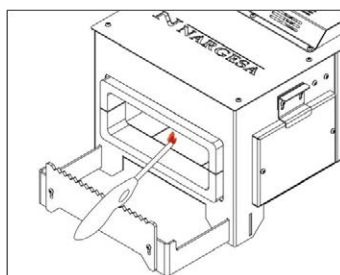


9. When the burner ignites, wait 20 seconds and stop pressing the Thermocouple button.

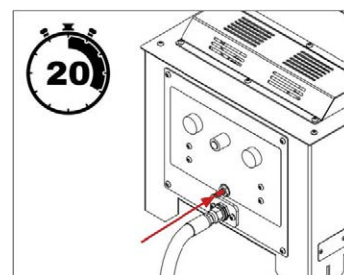


10. Open Gas Valve 1 progressively to the maximum.

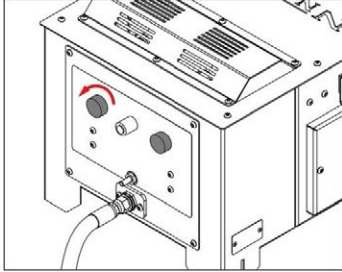


11. Increase the gas pressure progressively up to 1 bar.

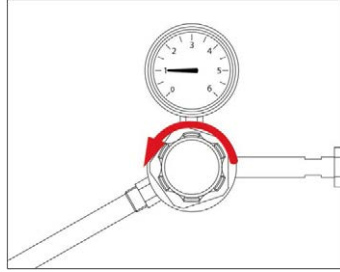


12. Open Gas Valve 2 progressively to the maximum. If the model is H2.

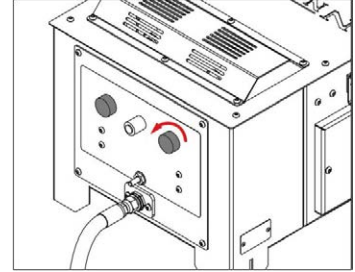

13. After 30 minutes, stop the furnace by closing the gas supply of the Adapter until the flame goes out.

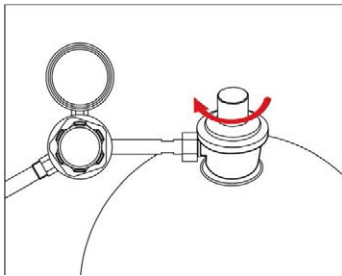

14. Close the gas valves.

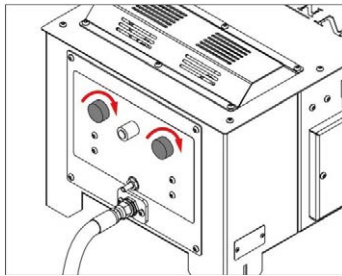


5.8. Lighting up the furnace

To proceed with the ignition of the furnace, we'll follow the steps below:

1. Make sure all gas valves are completely closed.
2. Make sure the **Combustión chamber** is empty and free from any other element.
3. Connect the **Adaptor** to the gas bottle.
4. Verify that all gas connections between the bottle and the furnace are correctly connected and that there is no leak.
5. Checkup that the gas work pressure is between 0,1 and 1,5 bars. (Pressure recommended by Nargesa: 0,2 to 1 bar).
6. Open the **Gas valve 1**, a few degrees.
7. Press the **Thermocouple pushbutton** and the **Electronic ignition pushbutton**.
8. When the Burner lits up, release the **Electronic ignition button**.
9. Wait 20 seconds and reléase the **Thermocouple pushbutton**.
10. Open the **Gas valve 1** progressively 'til its limit.
11. Progressively increase the gas pressure up to 1 bar. (Pressure recommended by Nargesa: 1 bar).

If you want to work with both burners, once **Burner 1** is turned on:

1. Press the **electronic ignition button**.
2. Open the **gas valve 2** progressively up to the maximum.
3. When the burner is ignited, release the **electronic ignition button**.

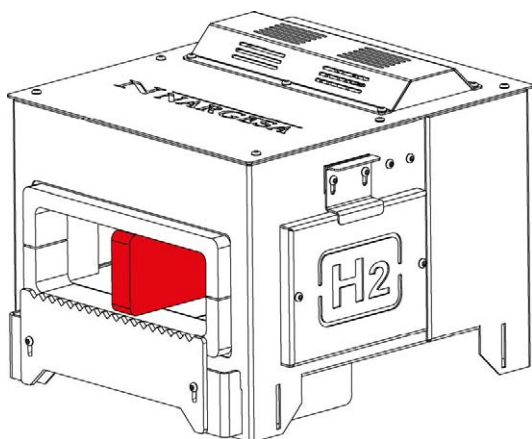

If you want to work with a single burner, it is advisable to place the insulating separator in the middle of the **Combustion chamber**. In this way, the space is divided and the calorific power of the burner is concentrated.

5.9. Shutdown the Furnace

To proceed with the shutdown of the furnace:


1. Turn the **Gas valve 2** clockwise until it is completely closed.
2. Turn the **Gas valve 1** clockwise until it is completely closed.
3. Disconnect the Adapter from the gas bottle.

6. POSSIBLE BREAKDOWNS

BREAKDOWN	CAUSE	SOLUTION
The furnace might not ignite	Unproper gas connections	To connect correctly the gas plug and make sure that the Adaptor of the gas bottle is properly fit. See section 5.4
	The Manometer of the Pressure Regulator shows 0	Open the Pressure regulator and the flow of the Adaptor in the gas bottle
	Gas valve 1 is closed	Open Gas Valve 1 just some degrees.
	Gas Valve 1 is way too open	Close a Gas Valve 1 a few degrees
Electronic switching does not generate the ignition spark	The spar plug is touching Burner 1	Place the spark plug 4mm away from the Burner 1
	The spark plug is more tan 4mm away from Burner 1	Place the spark plug 4mm from Burner 1
	Inner battery has been exhausted e ha agotado la pila interior	Change the inner battery (AA, 1,5v)
The flame turns to be turbulent	Excesss of fuel in the blend of air and gas.	Reduce the amount of fuel by closing gradually the Gas Valve 1
		Reduce the job pressure
	The gas injector is stuck or dirty	Replace the injector
The flame turns orange	Lack of fuel in the bland of air and fuel	Increase the amount of fuel by opening the Gas Valve 1 gradually
	The gas injector is stuck or dirty	Replace the injector
	The air inlet is dirty	Clean up the furnace air inlet
The flame goes out of the combustion chamber	Excessive gas pressure	Reduce the gas pressure
<p>If the problem goes on, please contact our technical assistance in Nargesa</p> <p>☎ +34 972568085 📞 +34 620446827 ✉ sat2@nargesa.com 🌐 sat2.nargesa</p>		

7. WARNINGS

The H2 furnace is designed so that the operator can adjust the machine and heat the necessary parts with total safety. Any modification of the machine will alter the security that it offers, breaching the certificate of conformity and being able to generate irreparable personal and material damages. Carefully read the **Warning label** on the left side of the furnace.

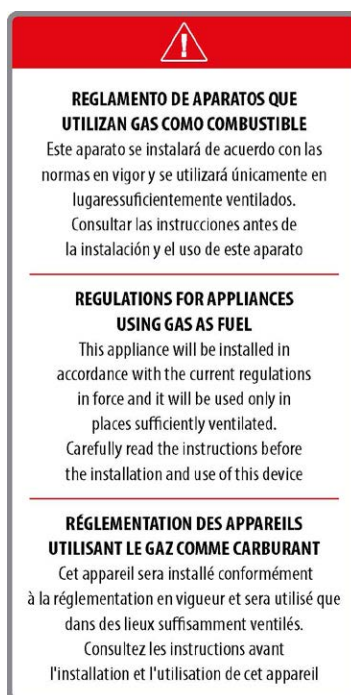

7.1. Waste hazards


During the heating of materials some danger situations might occur, which need to be analyzed and prevented.

- Be careful while introducing and removing material in the machine, in order to prevent any burnt or injury.
- Firmly hold the piece to be inserted or removed to avoid unwanted movements due to the weight of the piece.
- Hold the material by the cold end, never by the hot zone
- Maintain a safe distance between the machine and the operator

7.2. Protection elements for the operator

Like elements of personal protection, it is mandatory:

- Utilizar gafas y botas de protección homologadas
- To wear thermal gloves for handling the machine and all along the heating processes.
- To wear homologated and approved protective goggles and shoes.

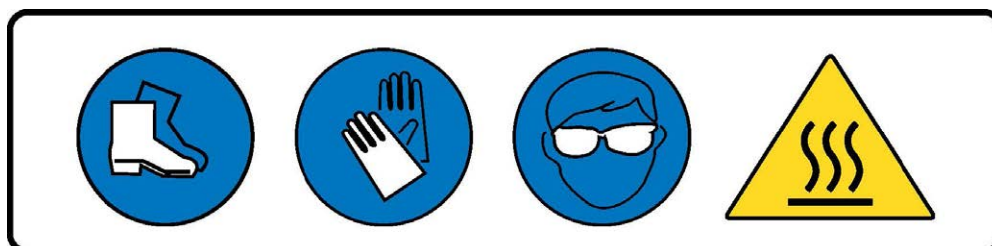


Tecnichal Annex

Furnance H2


List of parts

Gas layout







List of parts

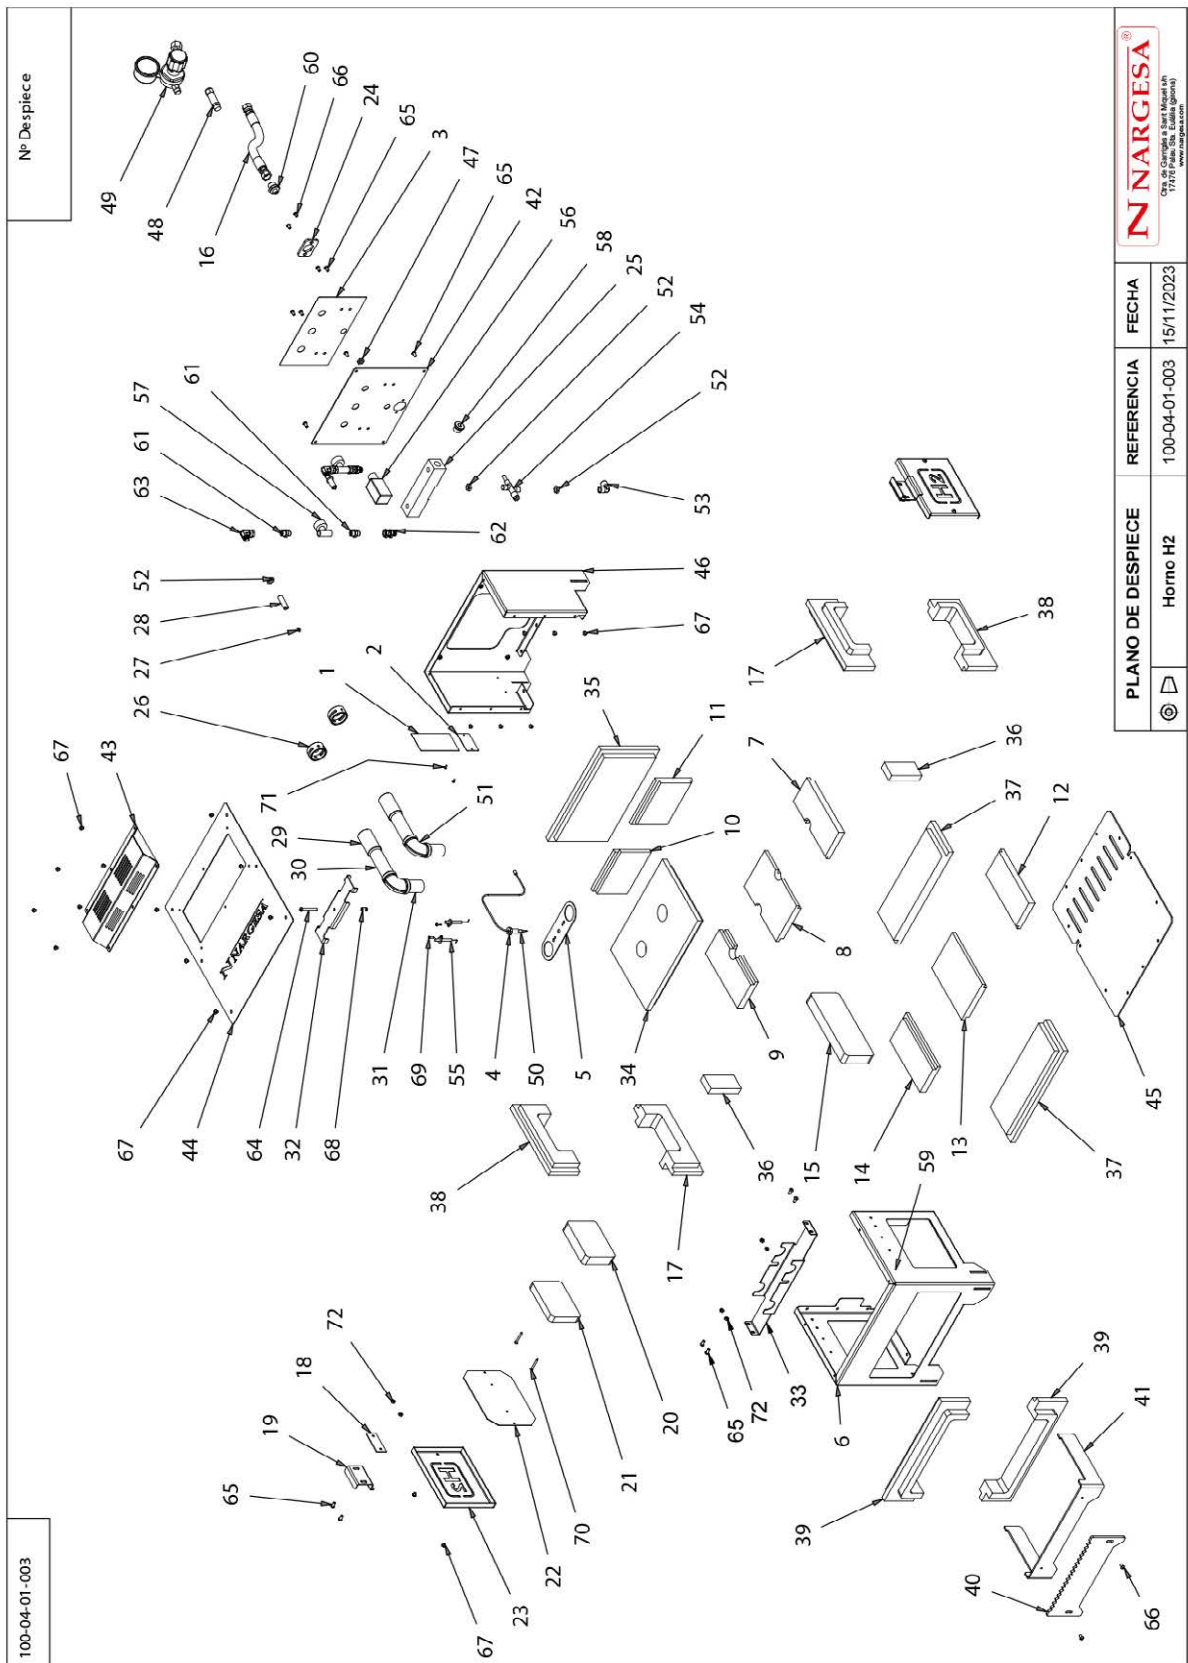

Elemento	Miniatura	Nº de pieza	Descripción	CTDAD
1		122-04-01-003	Calca Advertencias Horno	1
2		122-04-01-002	Placa Características	1
3		122-04-01-001	Calca H2	1
4		120-04-01-00157	Separador Termopar	1
5		120-04-01-00156	Soporte Bujías	1
6		120-04-01-00155	Carenado Frontal	1
7		120-04-01-00151	Aislante Superior 20	1
8		120-04-01-00150	Aislante Superior 20	1
9		120-04-01-00149	Aislante Superior 20	1
10		120-04-01-00148	Aislante Posterior 20	1
11		120-04-01-00147	Aislante Posterior 20	1
12		120-04-01-00146	Aislante Inferior 20 3	1
13		120-04-01-00145	Aislante Inferior 20 2	1

Elemento	Miniatura	Nº de pieza	Descripción	CTDAD
14		120-04-01-00144	Aislante Inferior 20 1	1
15		120-04-01-00143	Aislante Separador	1
16		120-04-01-00141	Manguera Metálica L=1500mm	1
17		120-04-01-00139	Aislante Lateral 2 50	2
18		120-04-01-00137	Separador Fijación Puerta	2
19		120-04-01-00136	Fijación Puerta Lateral	2
20		120-04-01-00135	Aislante Puerta Lateral 30	2
21		120-04-01-00134	Aislante Puerta Lateral 20	2
22		120-04-01-00133	Cubre Chapa Puerta Lateral	2
23		120-04-01-00132	Puerta Lateral	2
24		120-04-01-00130	Antigiro Entrada Gas	1
25		120-04-01-00129	Colector De Gas	1
26		120-04-01-00128	Regulador Caudal De Aire	2


Elemento	Miniatura	Nº de pieza	Descripción	CTDAD
27		120-04-01-00127	Inyector	2
28		120-04-01-00126	Soporte Inyector	2
29		120-04-01-00124	Tobera Venturi	2
30		120-04-01-00123	Tobera Larga Quemador	2
31		130-04-01-00006	Difusor Quemador	2
32		120-04-01-00120	Tapa Superior Quemadores	1
33		120-04-01-00119	Soporte Quemadores	1
34		120-04-01-00118	Aislante Superior 30	1
35		120-04-01-00117	Aislante Posterior 30	1
36		120-04-01-00114	Aislante Lateral 20	2
37		120-04-01-00112	Aislante Inferior 30	2
38		120-04-01-00111	Aislante Lateral 1 50	2
39		120-04-01-00110	Aislante Frontal 50	2

Elemento	Miniatura	Nº de pieza	Descripción	CTDAD
40		120-04-01-00109	Apoyo Frontal	1
41		120-04-01-00108	Apoyo Material	1
42		120-04-01-00107	Tapa Regulación	1
43		130-04-01-00001	Capota	1
44		120-04-01-00104	Tapa Superior	1
45		120-04-01-00103	Base	1
46		120-04-01-00102	Carenado Posterior	1
47		041-GAS-00014	Tuerca 1/4"	1
48		041-GAS-00011	Válvula Antiretorno de Propano	1
49		041-GAS-00010	Regulador de Propano	1
50		041-GAS-00008	Termopar	1
51		041-GAS-00007	Codo 90º Inox AISI 304 H-H 1"	2
52		041-GAS-00006	Tuerca Estrecha 1/4" GAS	4

Elemento	Miniatura	Nº de pieza	Descripción	CTDAD
53		041-GAS-00005	Codo H-H 1/4	1
54		041-GAS-00004-GB	Valvula Seguridad Termopar M-M 1/4	1
55		041-GAS-00003	Bujia de Encendido	2
56		041-GAS-00002	Encendido Electronico H2	1
57		041-GAS-00001	Valvula Aguja H-H 1/4	2
58		040-TVA-00001	Tapon Allen 1/2'	2
59		040-SHF-00002	SUPLEMENTO HEMBRA FIJO 1/4	2
60		040-RRMM-00003	Racor Reducido 1/2'-1/4' Macho Macho	1
61		040-RMM-00011	Racor Macho - Macho - 1/4" BSP - Cono 60° - L = 27mm	4
62		040-RG-00002	Racor Giratorio Macho Hembra 1/4'	2
63		040-CMII-00003	Codo 90º - Macho/Hembra con TG - Conos 60° - G1/4"-19 (BSP)	2
64		020-I7380-M6X50	Tornillo Allen Abombado ISO7380 M6X50	1
65		020-I7380-M6X12	Tornillo Allen Abombado ISO7380 M6X12	16

Elemento	Miniatura	Nº de pieza	Descripción	CTDAD
66		020-I7380-M6X10	Tornillo Allen Abombado ISO 7380 M6X10	4
67		020-I7380-M6X6	Tornillo Allen Abombado ISO7380 M6X6	34
68		020-D9316Z-M6	Tuerca Remachable Ranurada M6	1
69		020-D7981-3C5X16	Tornillo DIN 7981 Ø3.5X16 Cabeza Alomada PHILIPS	2
70		020-D7505-4x40	Tornillo DIN 7505 Ø4x40 Cabeza Avellanada PHILIPS	4
71		020-D7337-3X8	Remache De Clavo DIN7337 De Al D3X8	2
72		020-D934-M6	Tuerca Hexagonal DIN934 M6	12

Gas layout

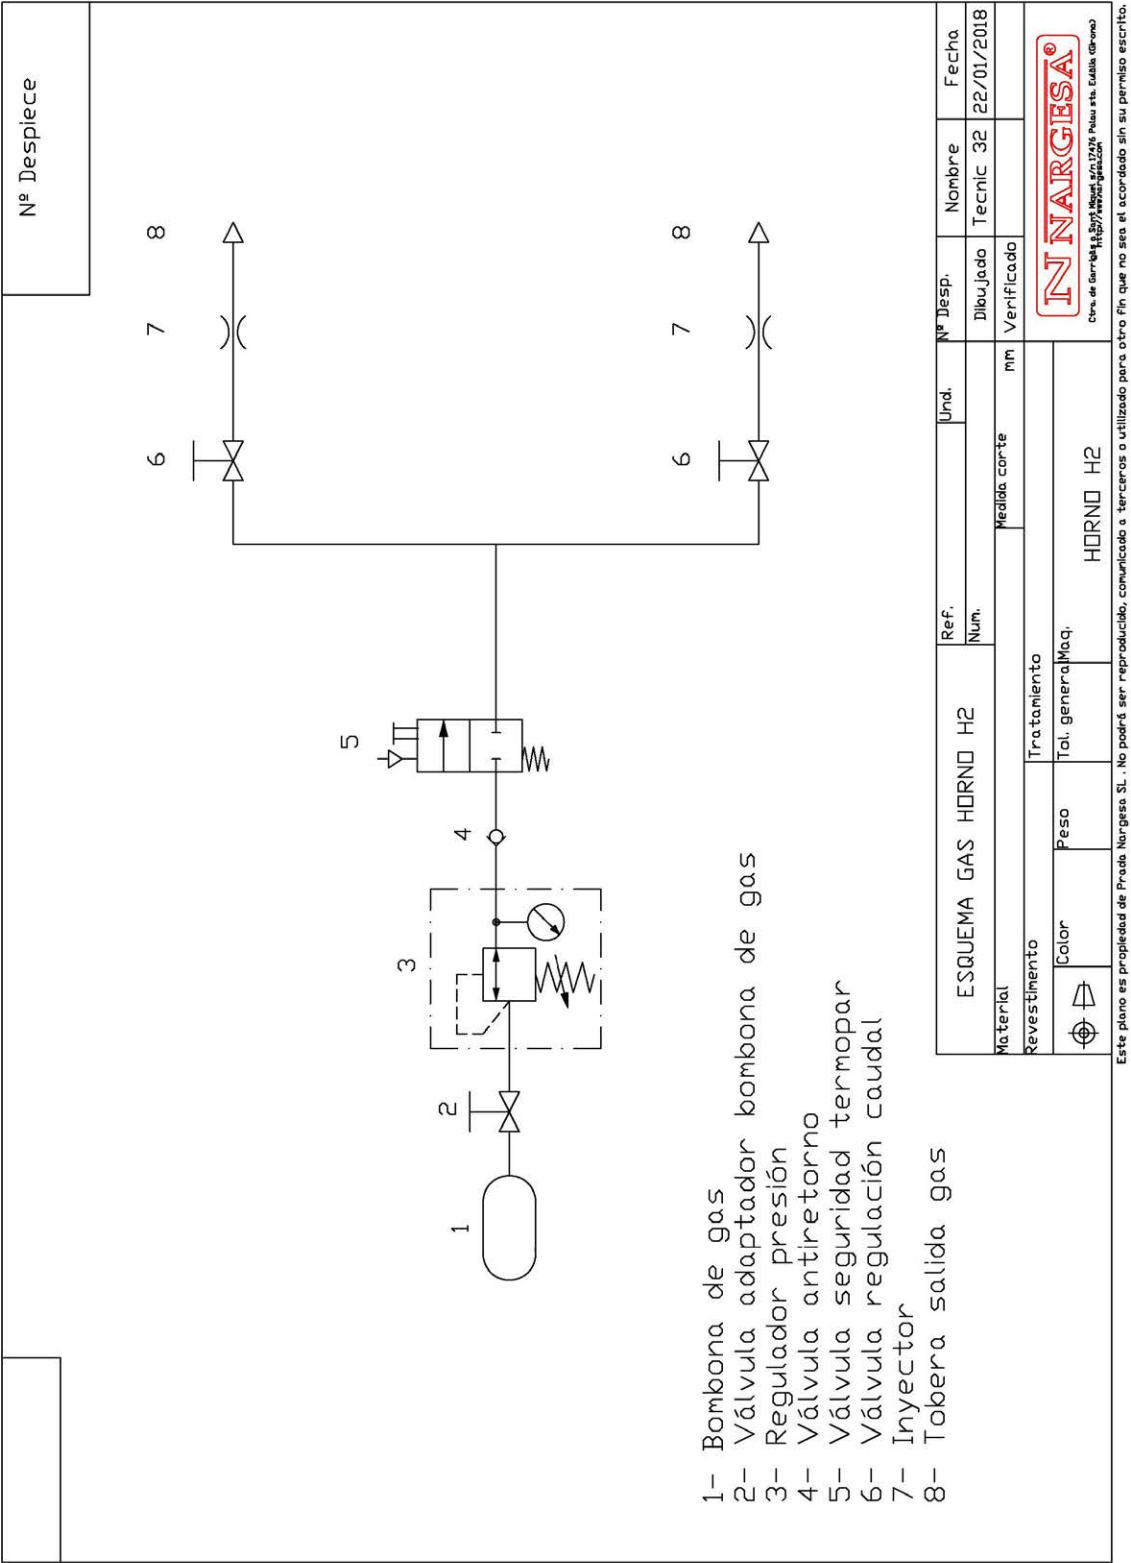

OUR RANGE OF MACHINERY



IRON WORKERS



NON-MANDREL PIPE BENDERS



HORIZONTAL PRESS BRAKES



SECTION BENDING MACHINES



CNC PIPE BENDERS



LASER WELDING EQUIPMENTS



TWISTING/SCROLL BENDING
MACHINES



HYDRAULIC PRESS BRAKES



HYDRAULIC SHEAR MACHINES



GAS FORGES



IRON EMBOSSING MACHINES



END WROUGHT IRON MACHINES



BROACHING MACHINES



POWER HAMMERS



BLACKSMITH FORGING PRESS